

INSTALL INSTRUCTIONS

Linux*

If there is a previous version of the Intel® Firmware Engine prior to the release 4.0.1 version it is recommended to uninstall prior versions before installing this release.

1. To uninstall:
 - a. Open a command Terminal in the directory to the directory where the Intel® Firmware Engine was installed (typically /opt/Intel/Intel(R) Firmware Engine/4.0.1.xxxxxx)
 - b. Execute the command “Change Intel(R) Firmware Engine Installation” from a command Terminal, type:
 - i. ``sudo ./Change\ Intel\ (R)\ Firmware\ Engine\ Installation``
 - c. Follow the uninstall instructions and keep any prior work desired.
2. To install:
 - a. Follow the Quick start guide for system requirements.
 - b. Open a command Terminal in the directory where the downloaded program file (.bin) is located.
 - c. Change the .bin file properties to include 'execute' and grant required permissions using the following command: ``sudo chmod +x ./IntelFirmwareEngineSetup_4_0_1.bin``
 - d. To Install, type ``sudo ./IntelFirmwareEngineSetup_4_0_1.bin``
 - e. Follow the installer click-through menus to complete installation.