

## INSTALL INSTRUCTIONS

### Windows\*

1. If there is a previous version of the Intel® Firmware Engine prior to the release 4.0.1 version it is recommended to uninstall prior versions before installing this release. Under the Control Panel use the "Uninstall a program" menu to uninstall any previous versions of the "[Intel® Firmware Engine](#)" and keep any prior work desired.
2. If you choose to remove all prior work or projects you may also need to delete the repository typically in "C:\Users\Public\Repository" and "C:\Users\Public\Intel\Intel(R) Firmware Engine" directories.
3. The following directory is also recommended to remove before running the installer setup application "C:\Program Files (x86)\Zero G Registry"
4. Follow the Quick start guide for system requirements.  
Install the "[IntelFirmwareEngineSetup\\_4\\_0\\_1.exe](#)" file and follow the click through menus.