

## INSTALL INSTRUCTIONS

Linux\*

If there is a previous version of the Intel® Firmware Engine prior to the release 4.0 version it is recommended to uninstall prior versions before installing this release.

1. To uninstall:
  - a. Open a command Terminal in the directory to the directory where the Intel® Firmware Engine was installed (typically /opt/Intel/Intel(R) Firmware Engine/4.0.0.xxxxxx)
  - b. Execute the command “Change Intel(R) Firmware Engine Installation“ from a command Terminal, type:
    - i. ``sudo ./Change\ Intel\ (R)\ \ Firmware\ Engine\ Installation``
  - c. Follow the uninstall instructions and keep any prior work desired.
2. To install:
  - a. Follow the Quick start guide for system requirements.
  - b. Open a command Terminal in the directory where the downloaded program file (.bin) is located.
  - c. Change the .bin file properties to include 'execute' and grant required permissions using the following command: ``sudo chmod 777 ./IntelFirmwareEngineSetup_4_0.bin``
  - d. To Install, type ``sudo ./IntelFirmwareEngineSetup_4_0.bin``
  - e. Follow the installer click-through menus to complete installation.