

INSTALLATION INSTRUCTIONS

Note: Previous versions of the Intel® Firmware Engine must be uninstalled prior to installing this release. If the previous version of the application is 5.0 or greater, then previously installed platforms must also be uninstalled. Please backup any prior work before performing the uninstall operations.

Linux*

To uninstall:

1. Open a command Terminal in the directory to the directory where the Intel® Firmware Engine was installed (typically /opt/Intel/Intel(R) Firmware Engine/5.0.xxxxxx)
2. Execute the command "Change Intel(R) Firmware Engine Installation" from a command Terminal, type:
`'sudo ./Change\ Intel\ (R)\ \ Firmware\ Engine\ Installation'`
Follow the uninstall instructions and keep any prior work desired.
3. If the previous version of Intel® Firmware Engine is 5.0 or greater, the previously installed platforms must also be uninstalled.
 1. Open a command Terminal in the directory to the directory where the platform was installed (typically opt/Intel/MinnowBoard TurbotB21 Reference Platform 1.0.0)
 2. Execute the command from a command terminal, type
`'sudo ./Change\ Intel\ (R)\ \ Firmware\ Engine\ Platform\ Project\ Installation'`

To install :

1. Follow the Quick start guide for system requirements.
2. Open a command Terminal in the directory where the downloaded program file (.bin) is located.
3. Change the .bin file properties to include 'execute' using the 'chmod +x' command.
4. To install, type '`sudo ./IntelFirmwareEngineApplicationSetup_5_0.bin`' on the command line.
5. Follow the installer click-through menus to complete installation.
6. Install the desired Intel® Firmware Engine Platform package compatible with this release. For release 5.0 the MinnowBoardTurbotB21Setup_1_0.bin is compatible.
 1. To install, change the file properties using the '`chmod +x`' command and then type :
`'sudo ./MinnowBoardTurbotB21Setup_1_0.bin'`